



FKD40/60CNC with Y-Axis (Front view)

Axes X,Y,Z,C, A: Simultaneously movement at machining.
W (Cross beam): Only for stepwise height adjustment of the cross beam.

The stroke of the Z-Axis can be adapted by moving the position of the cross beam.

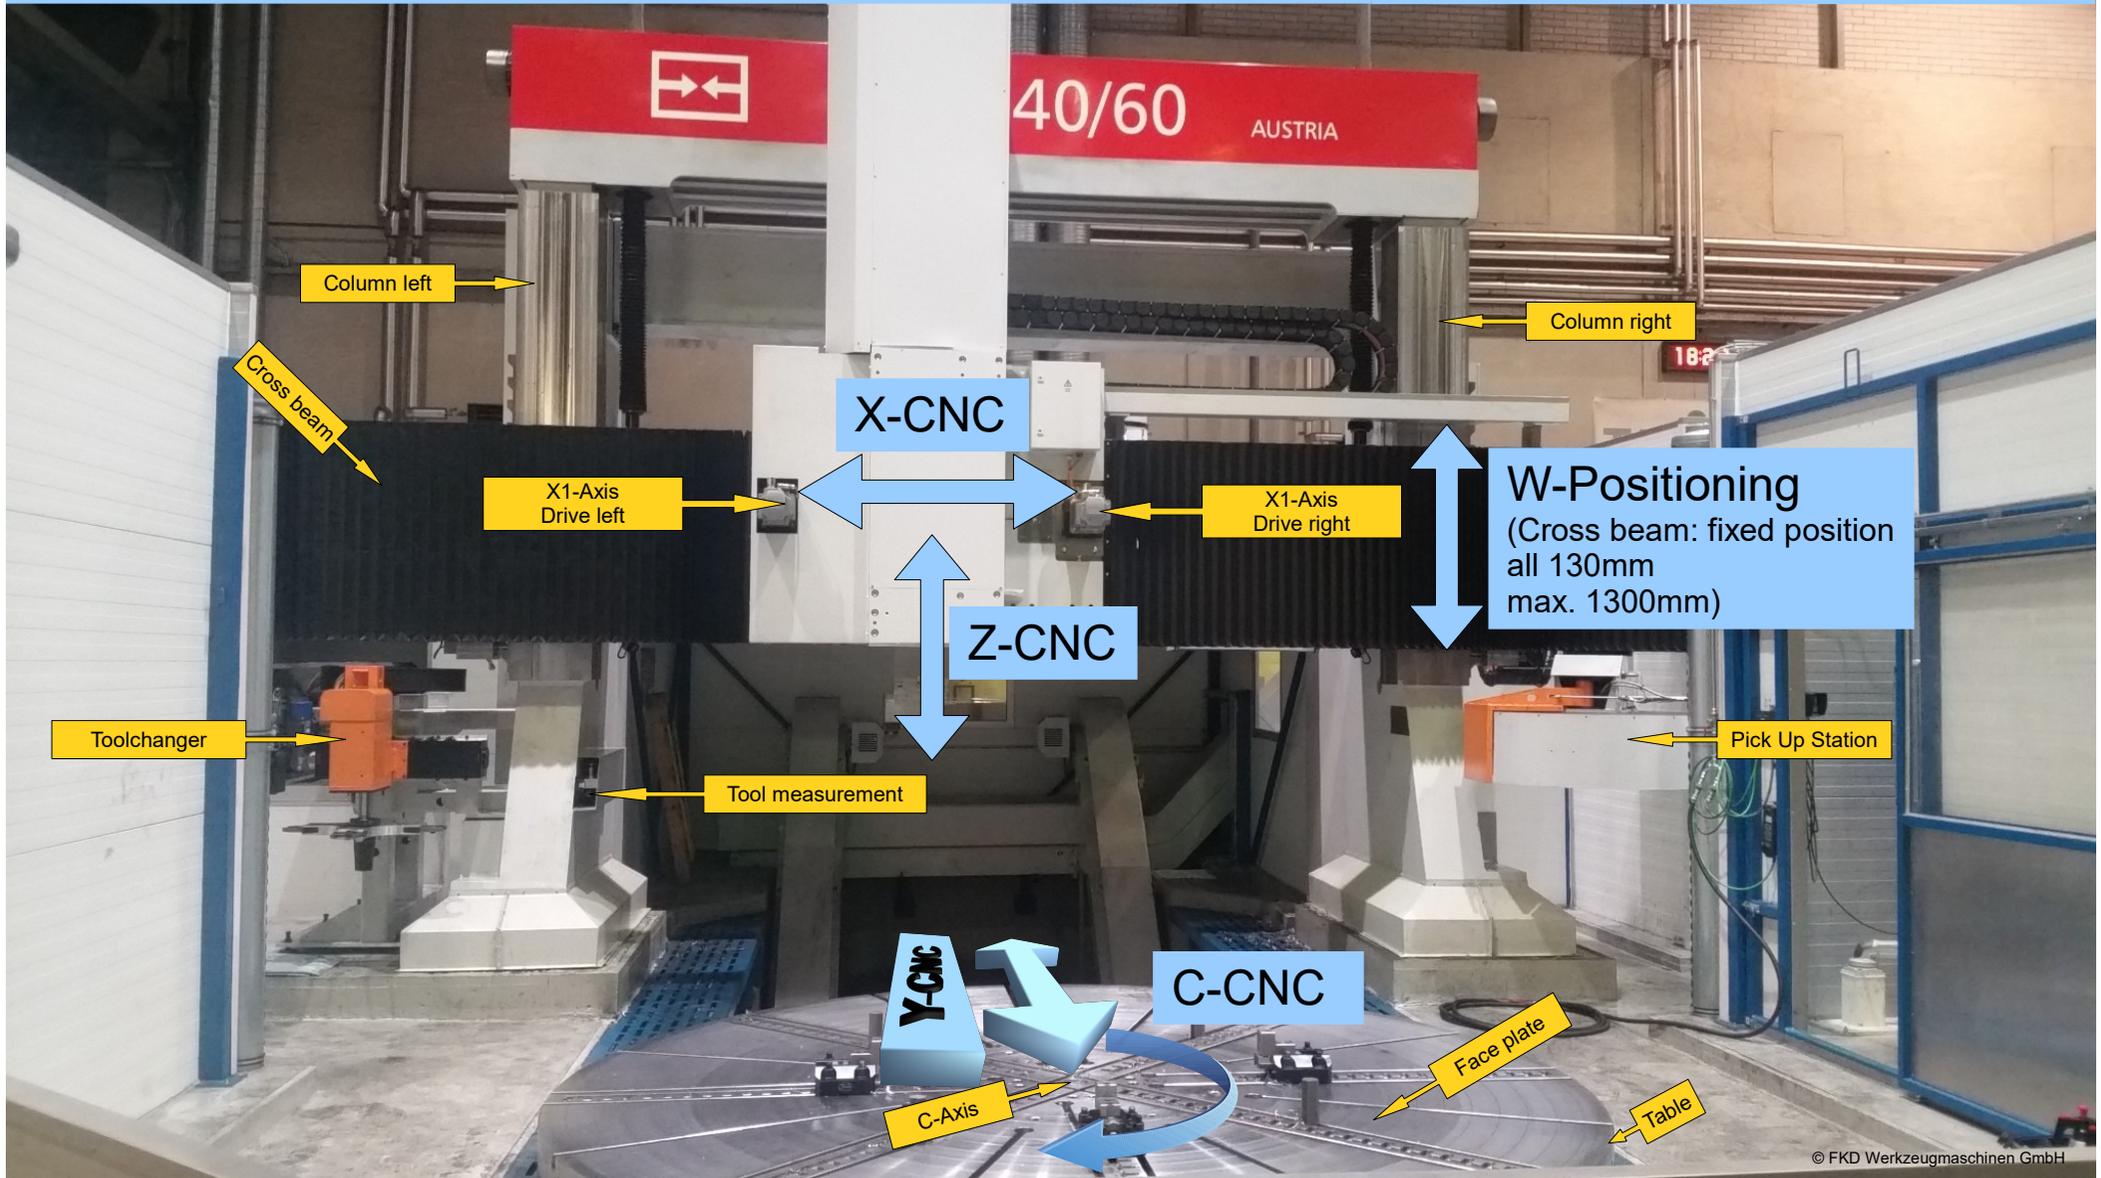

FKD40/60CNC with Y-Axis *(Side view)*

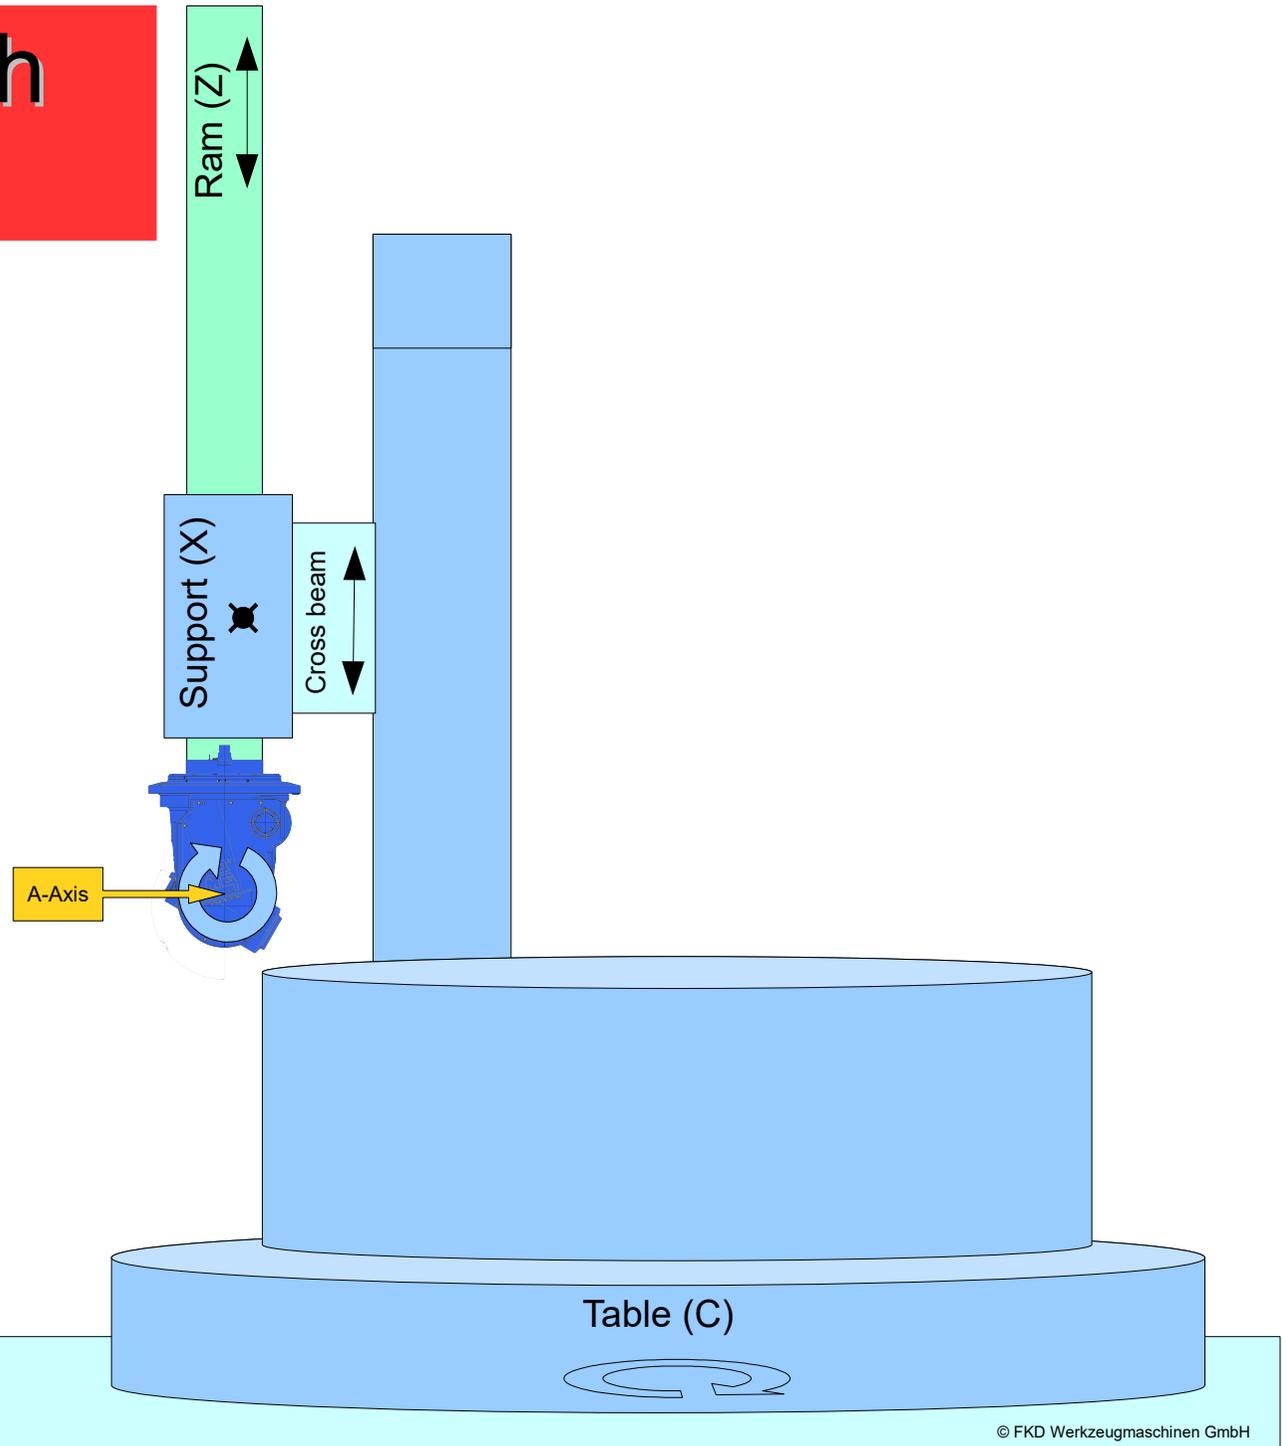

FKD40/60CNC with Y-Axis

Axes X,Y,Z,C, A: Simultaneously movement of these axes at machining (5-Axes CNC machine).

•X-Axis:

- Backlash free drive due to the principle of Antrieb durch das Prinzip Client-Server (Master-Slave)

•Y-Axis:

- Backlash free drive due to the principle of Antrieb durch das Prinzip Client-Server (Master-Slave)
- Simple loading of the machine
 - The faceplate table can be moved all the way forward to the operator (using the Y-axis)
 - When the faceplate table has moved all the way forward to the operator, the workpiece can simply be lifted onto the faceplate table and be attached onto the faceplate.

•Z-Axis:

- Ram
 - Cross section 300mm x 300mm
 - 2000mm stroke
 - Precise guidance through guide ways


•W-Axis (Cross beam)


- The cross beam is placed onto toothed racks, clamped hydraulically and the Z-position and the W-position are automatically calculated by the length measuring system (Heidenhain).
- Only for the stwp wise height adjustment of the cross beam.


•Faceplate table (table): maintenance free

•Fork angle head (A-Axis)

Adjusting Cross beam (W)

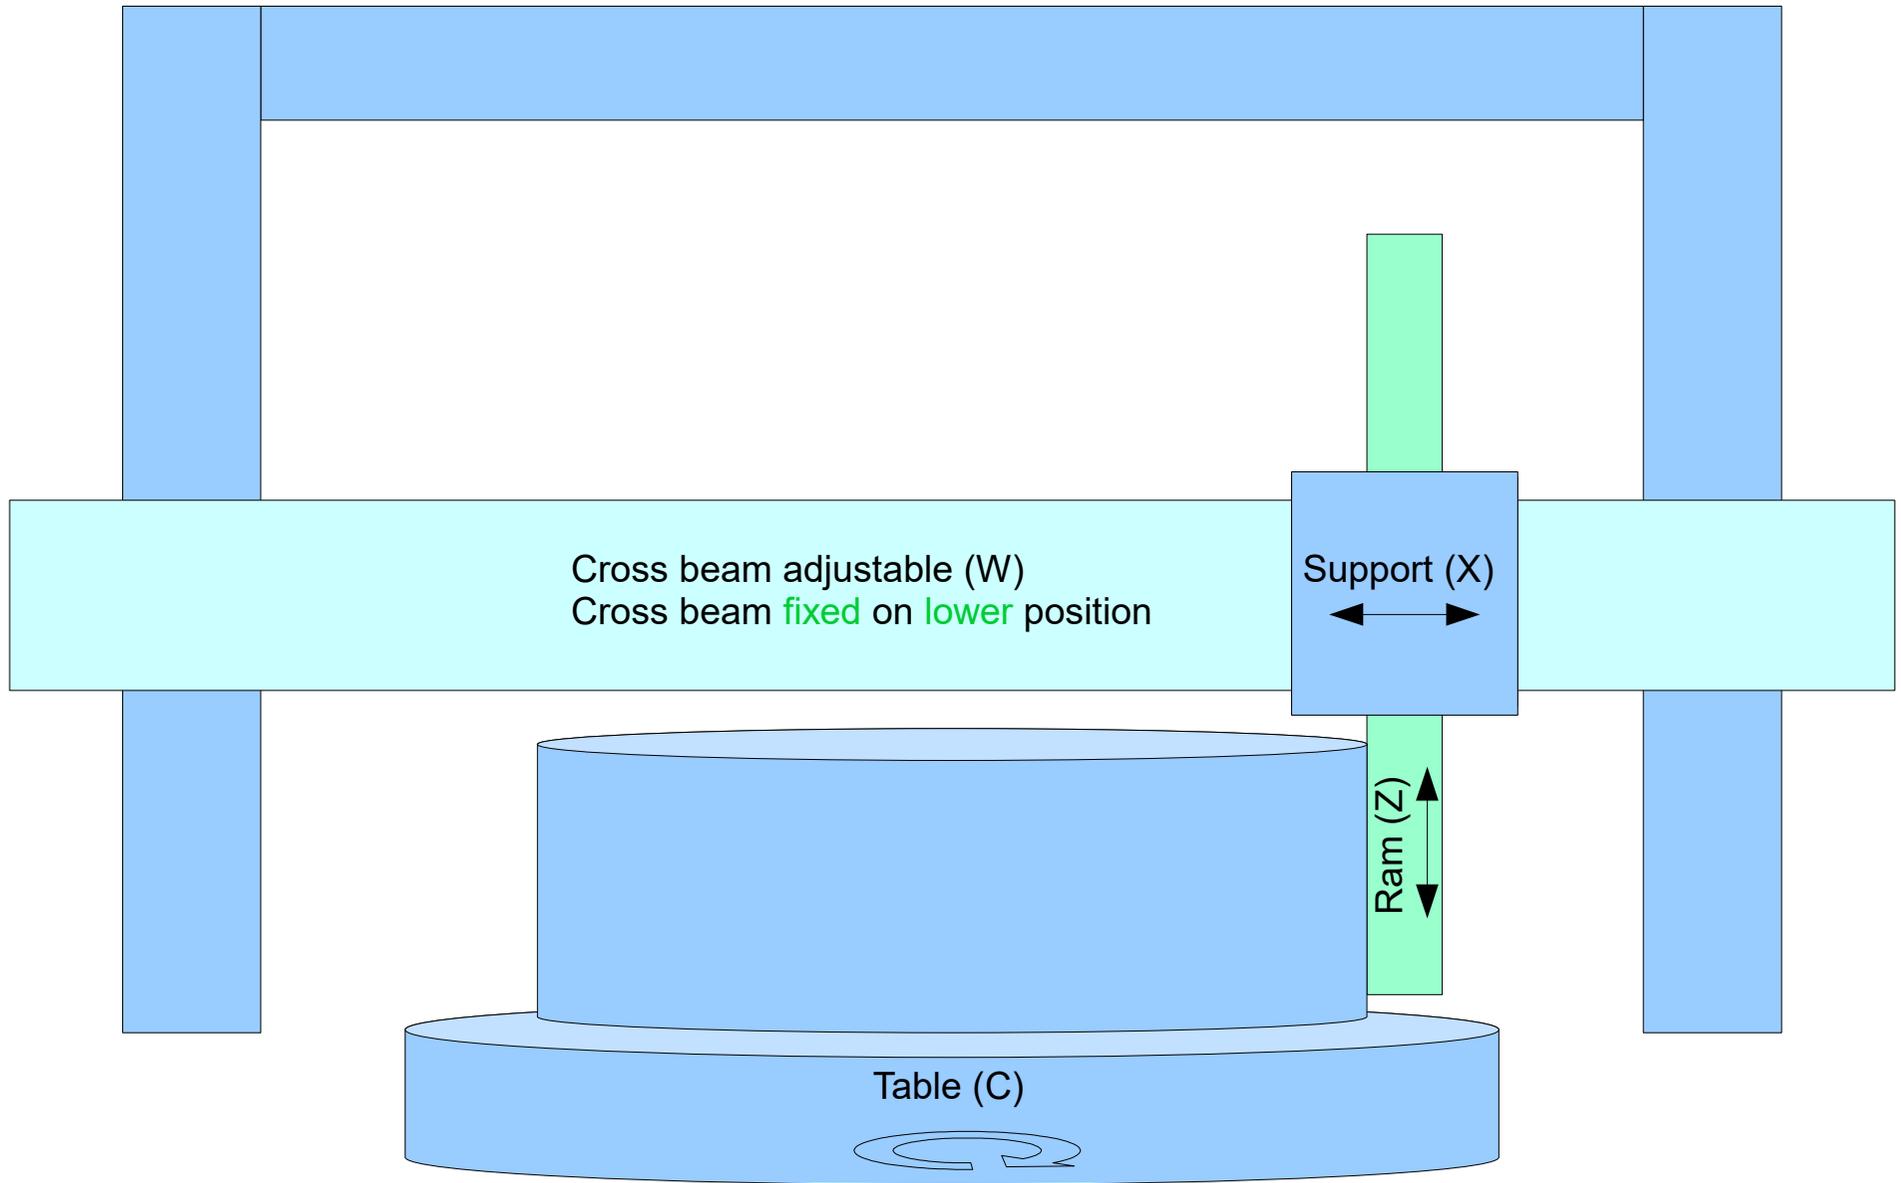

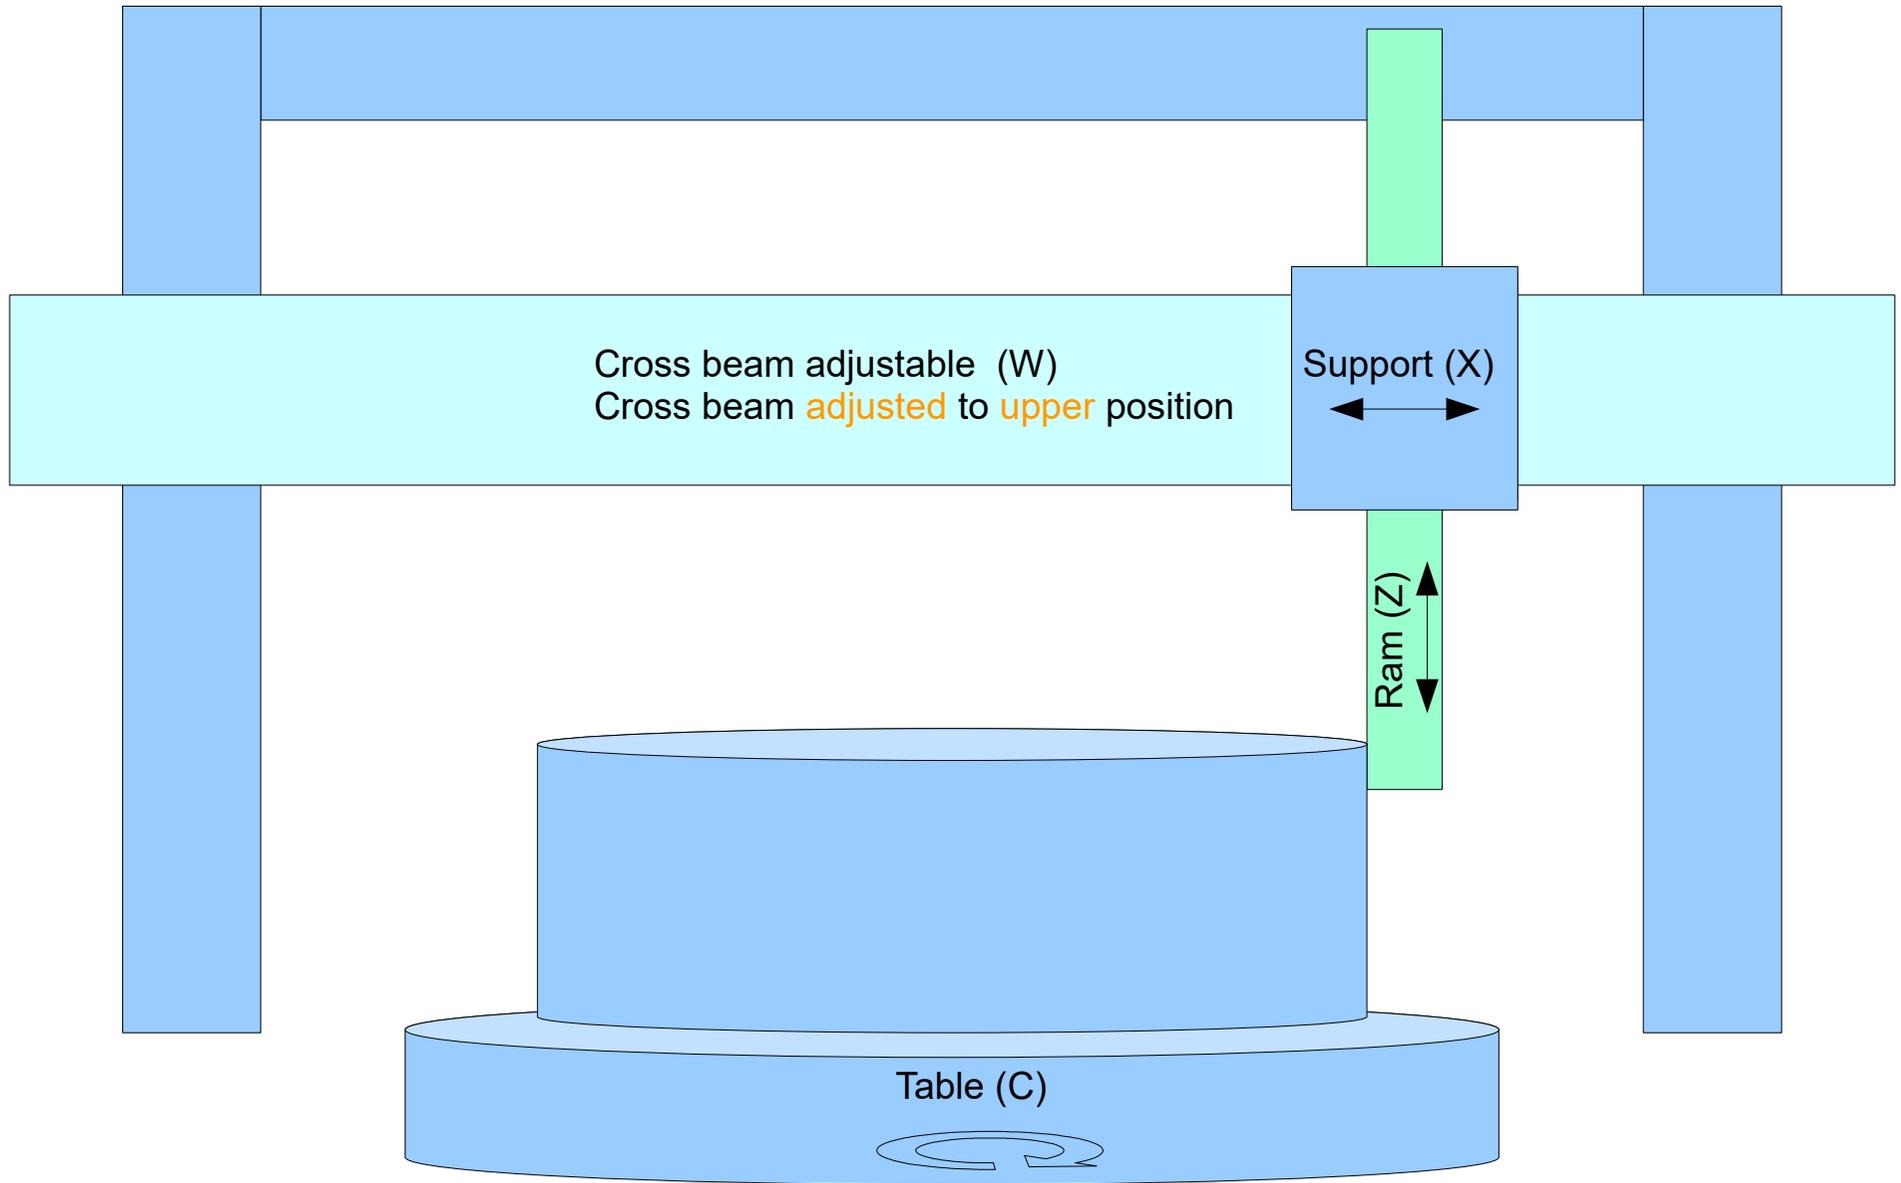


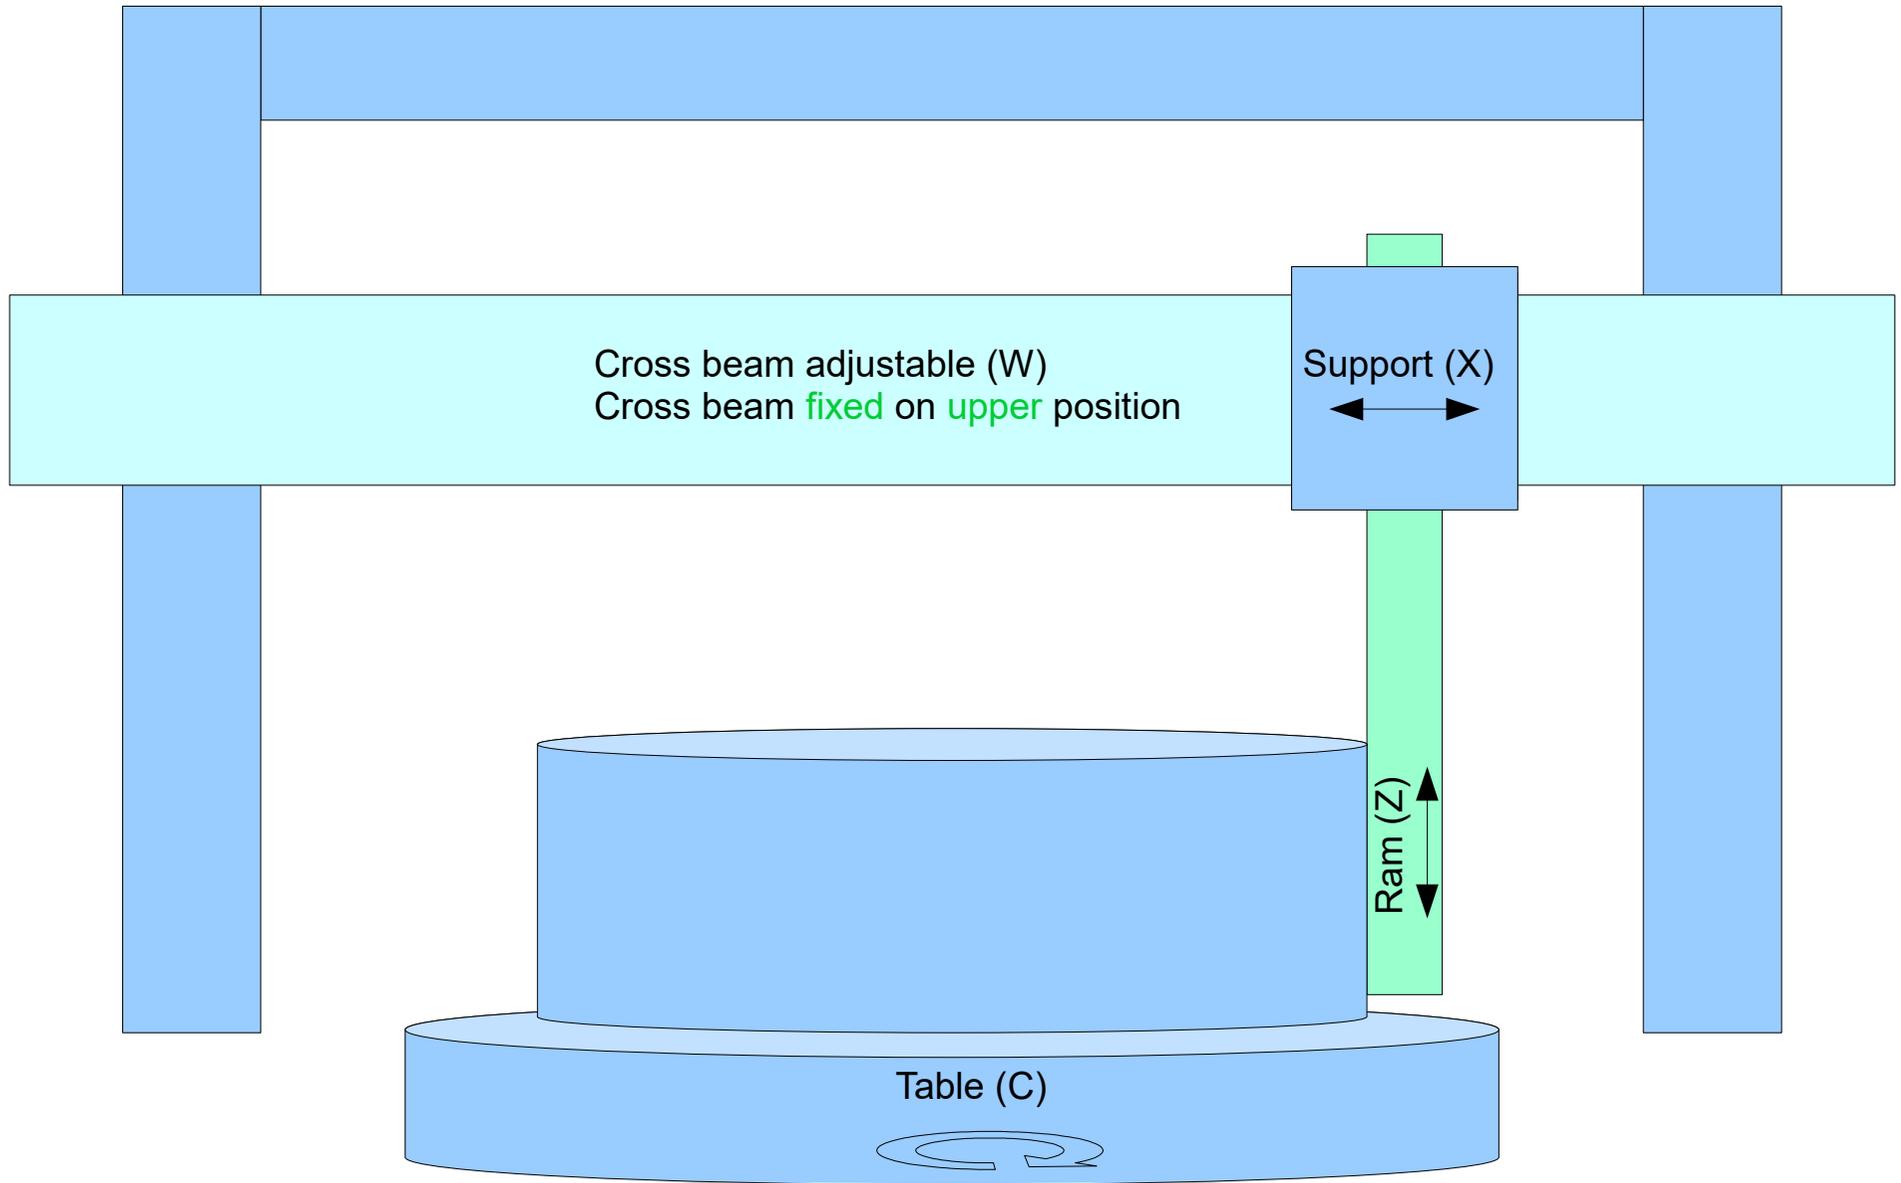


Machining

Moving ram

(Z)

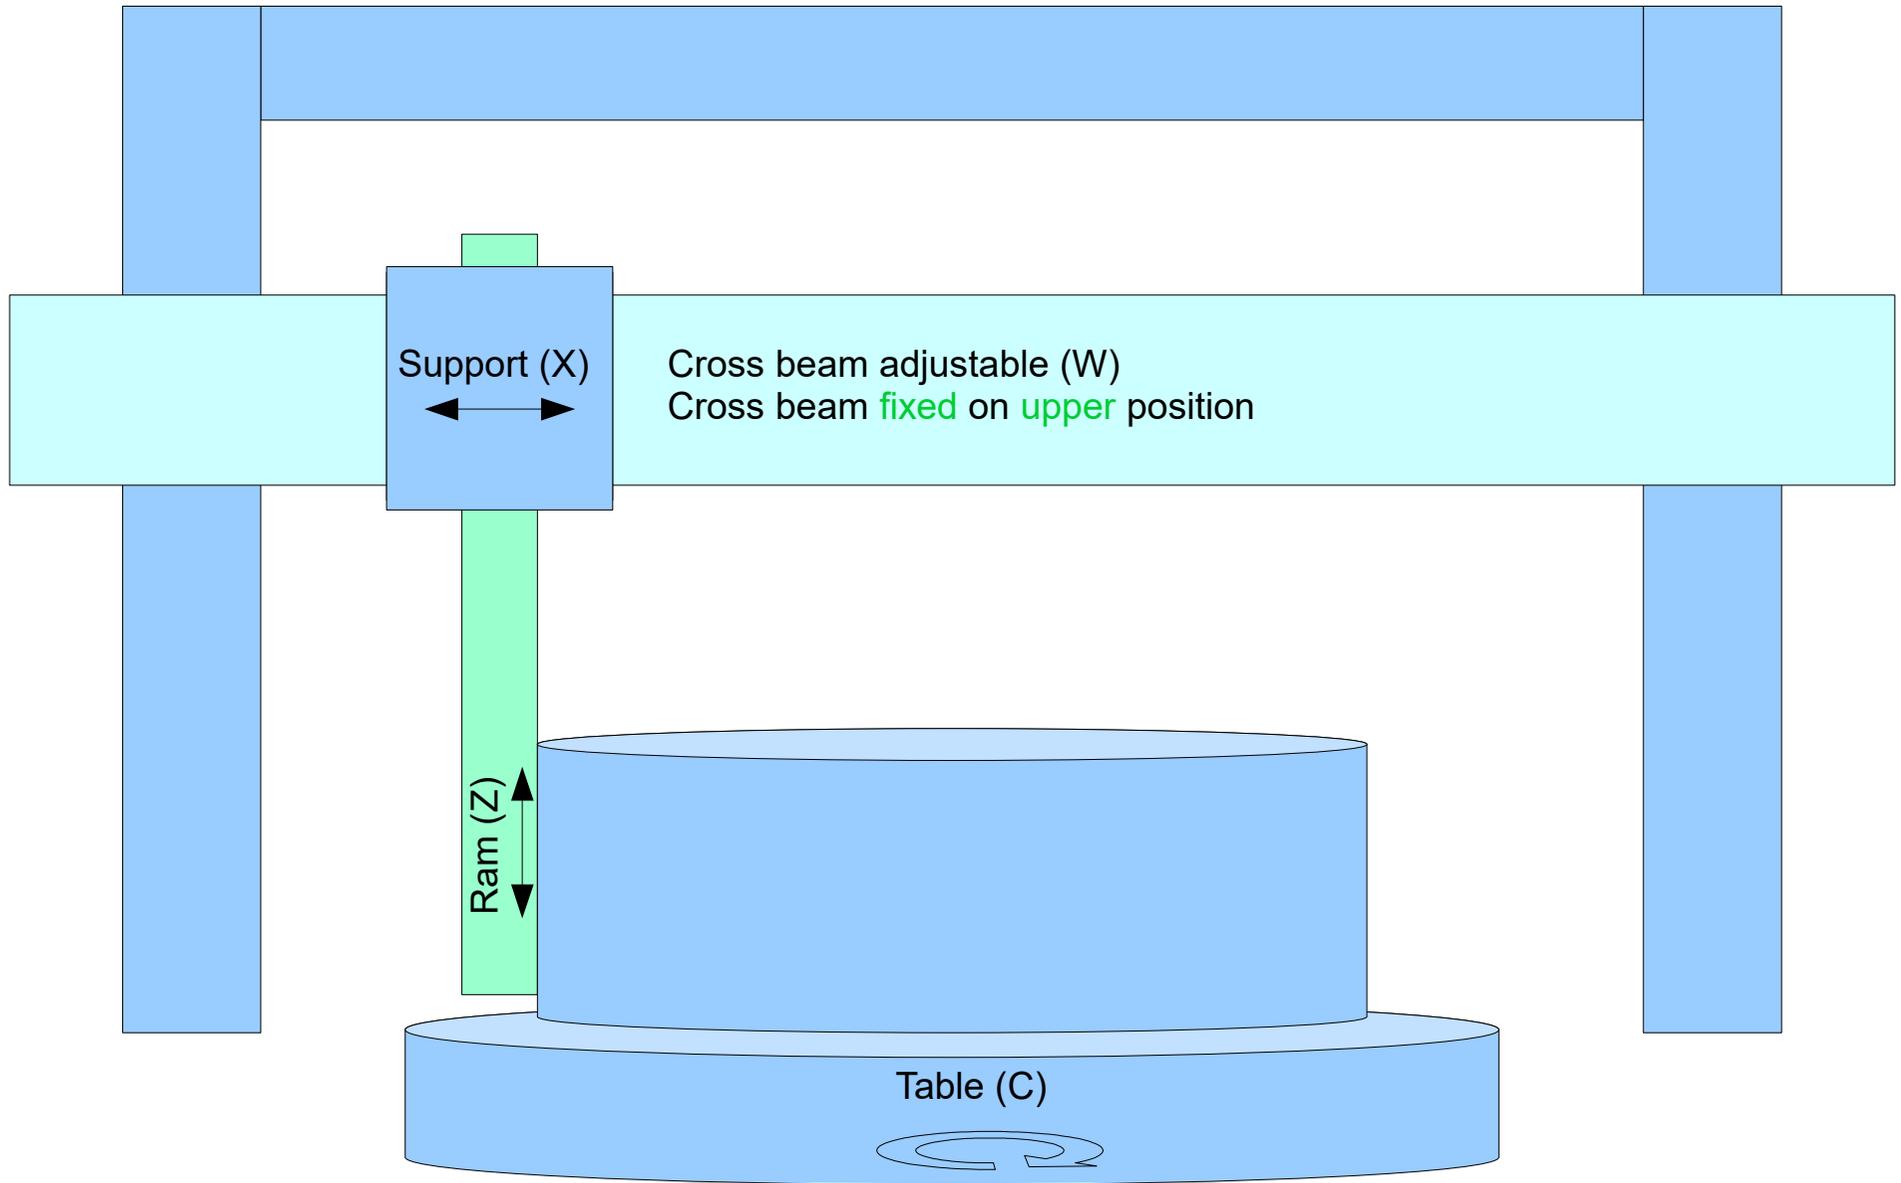


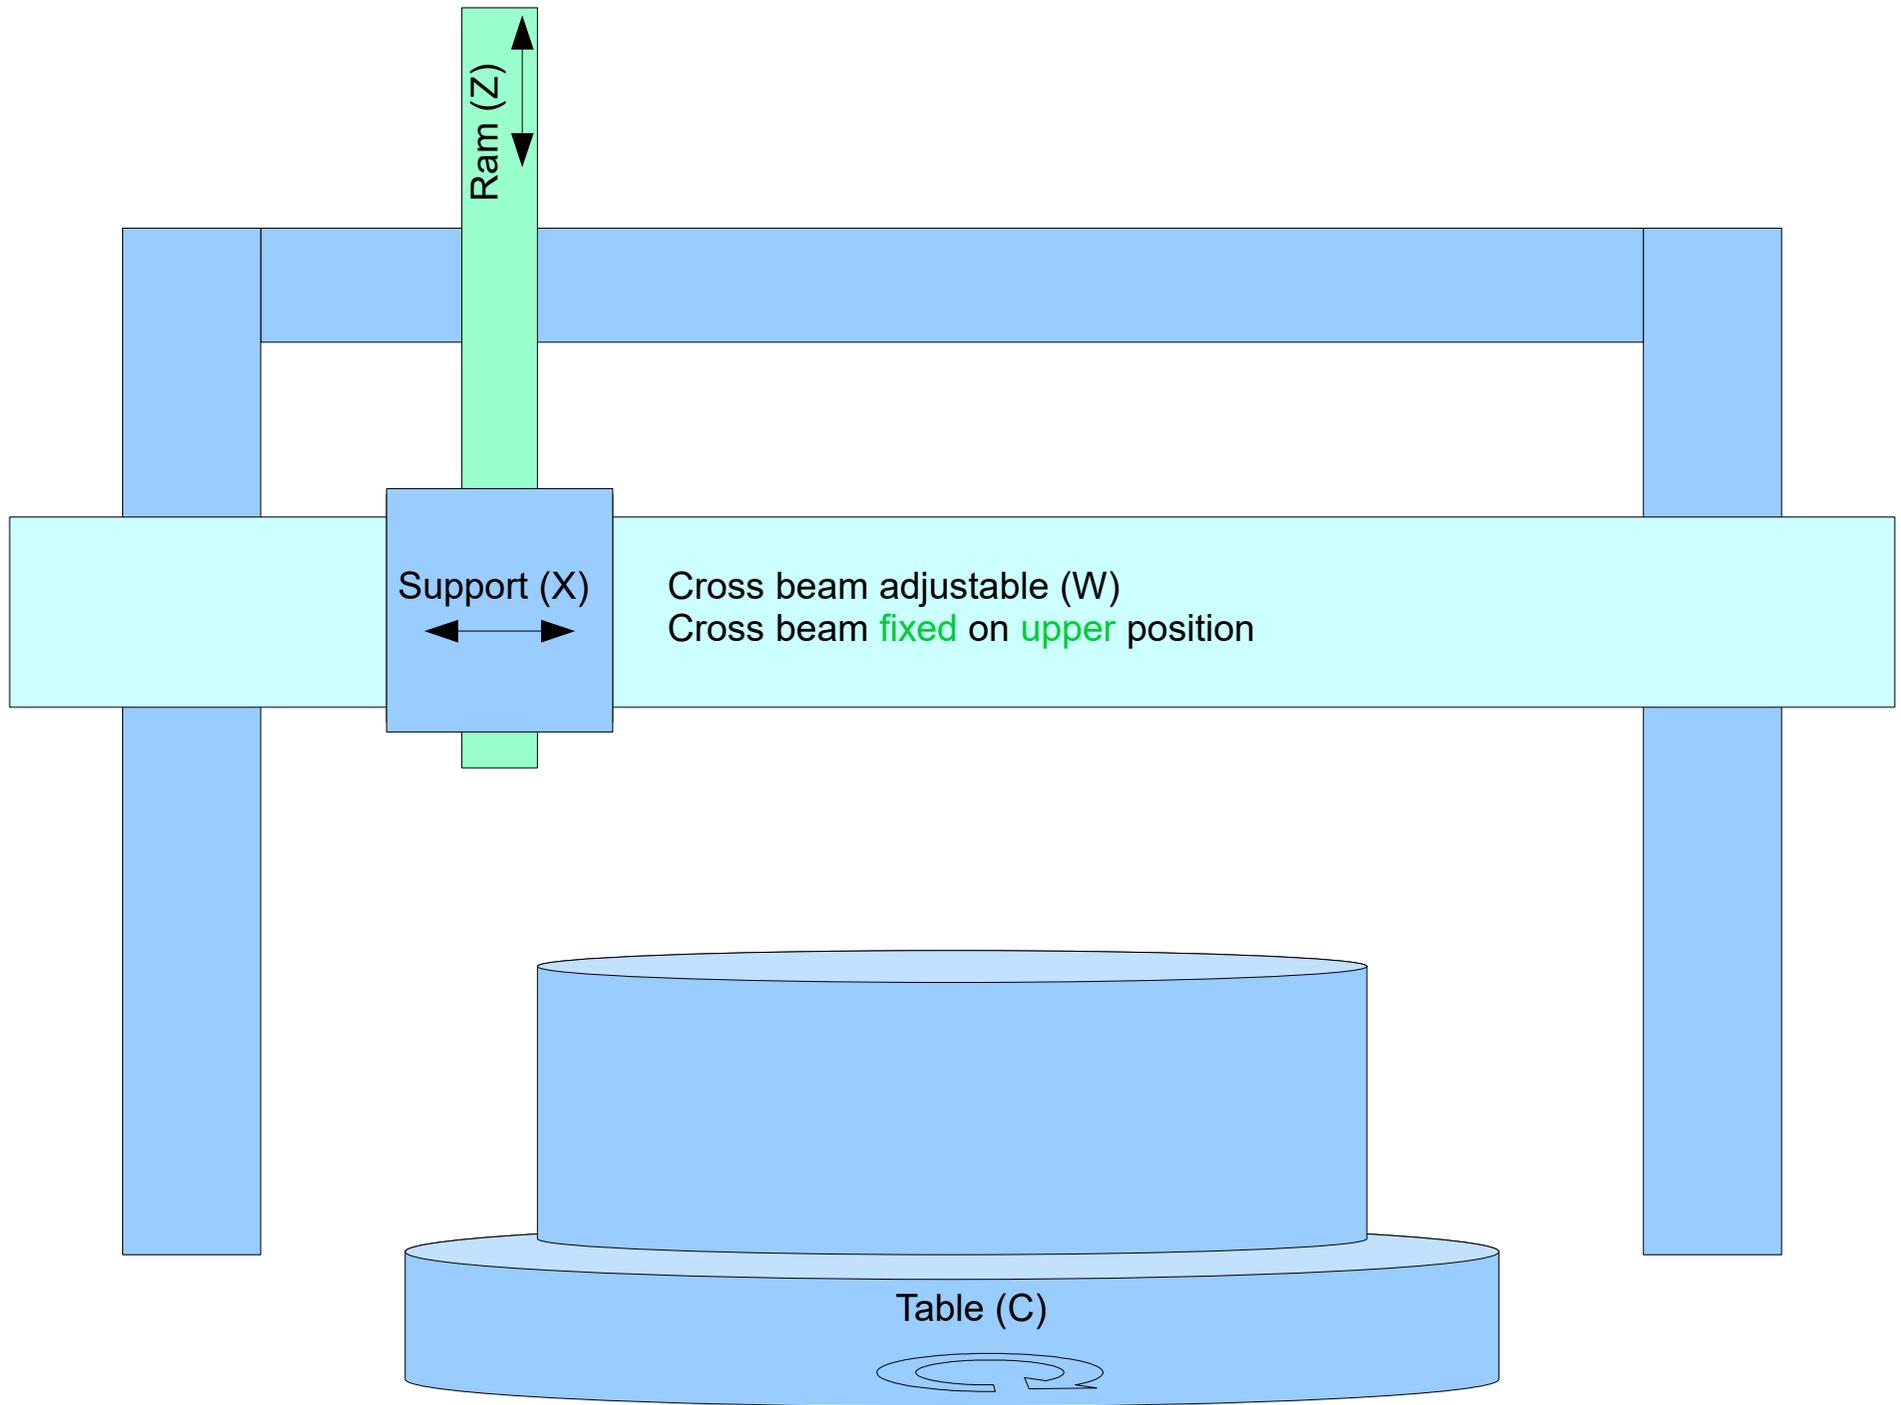


Machining


Moving support


(X)

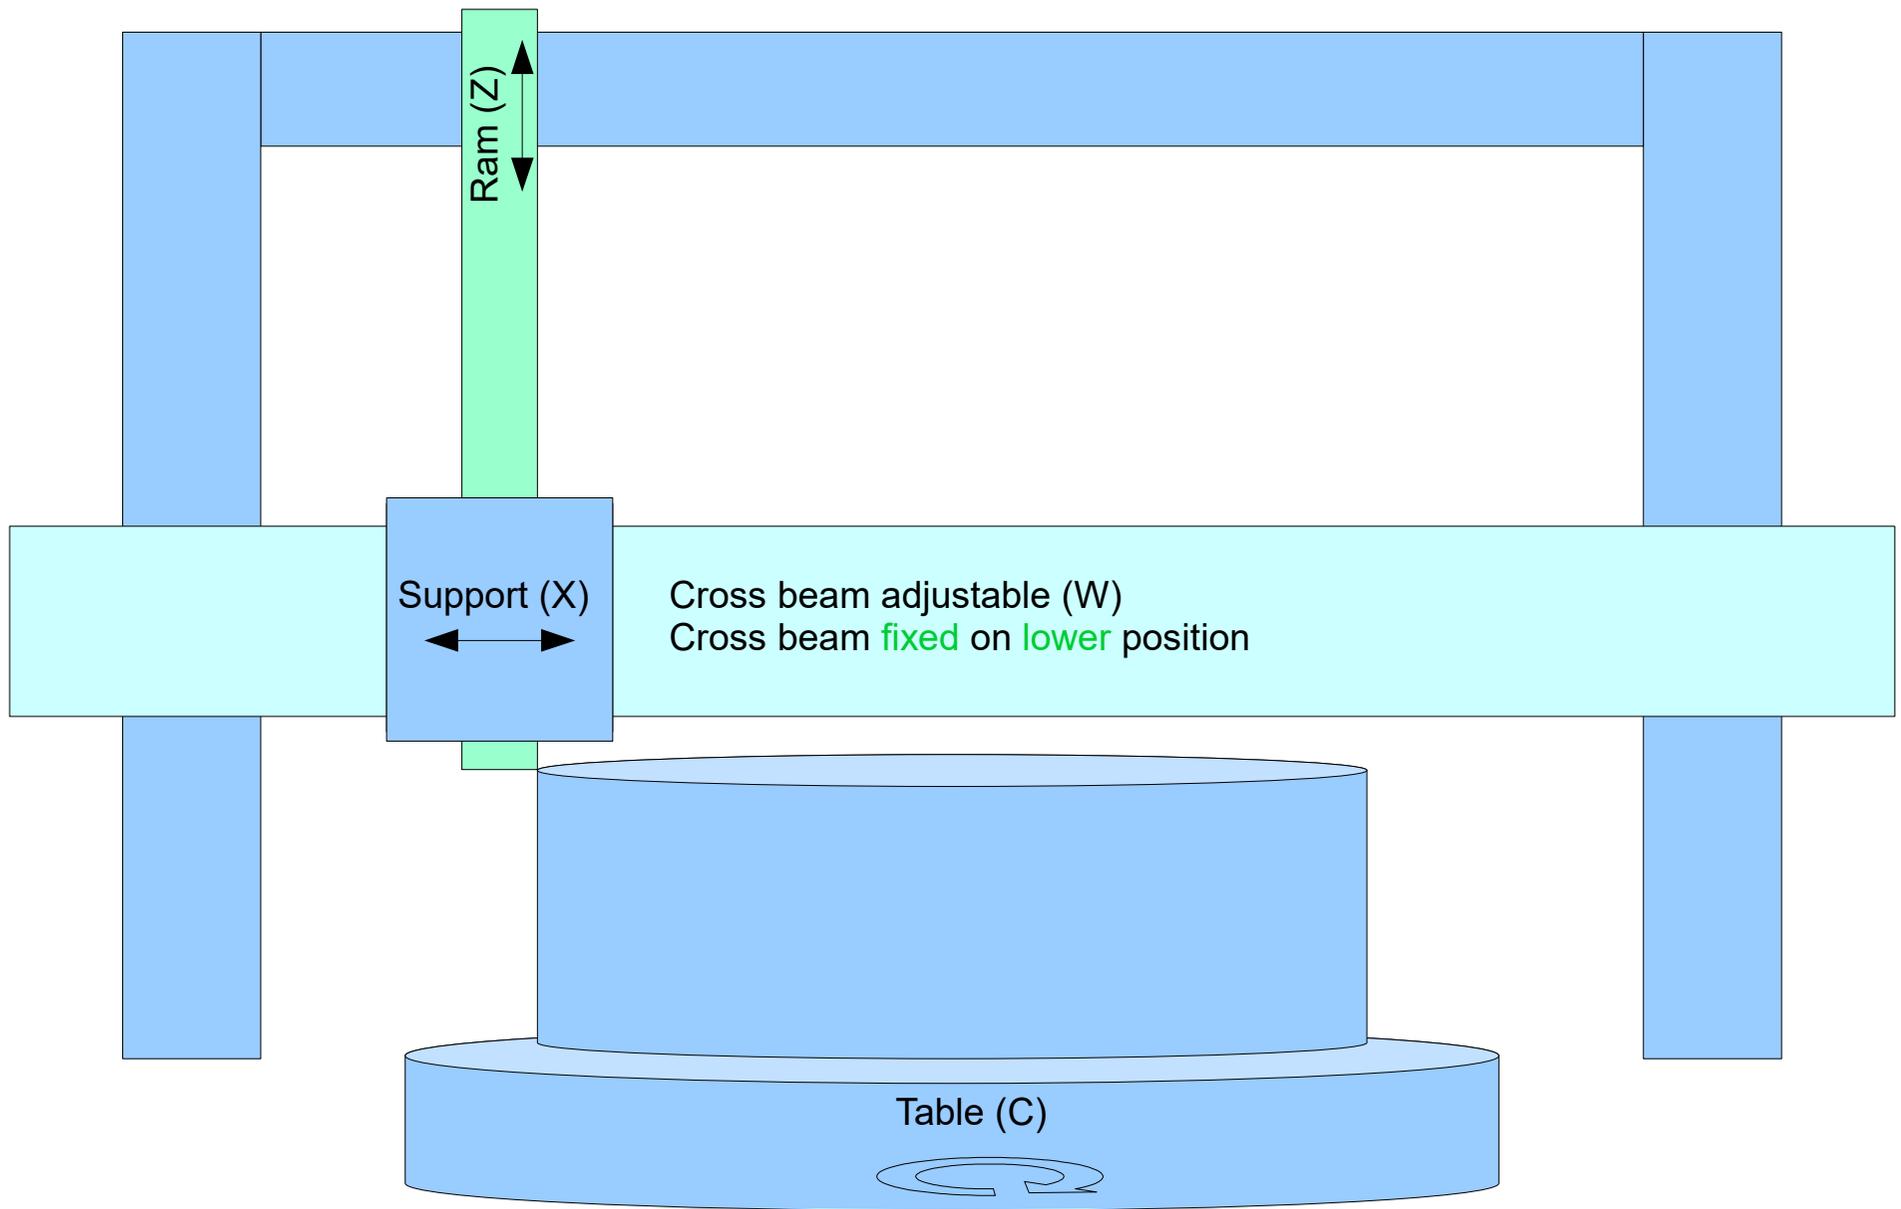


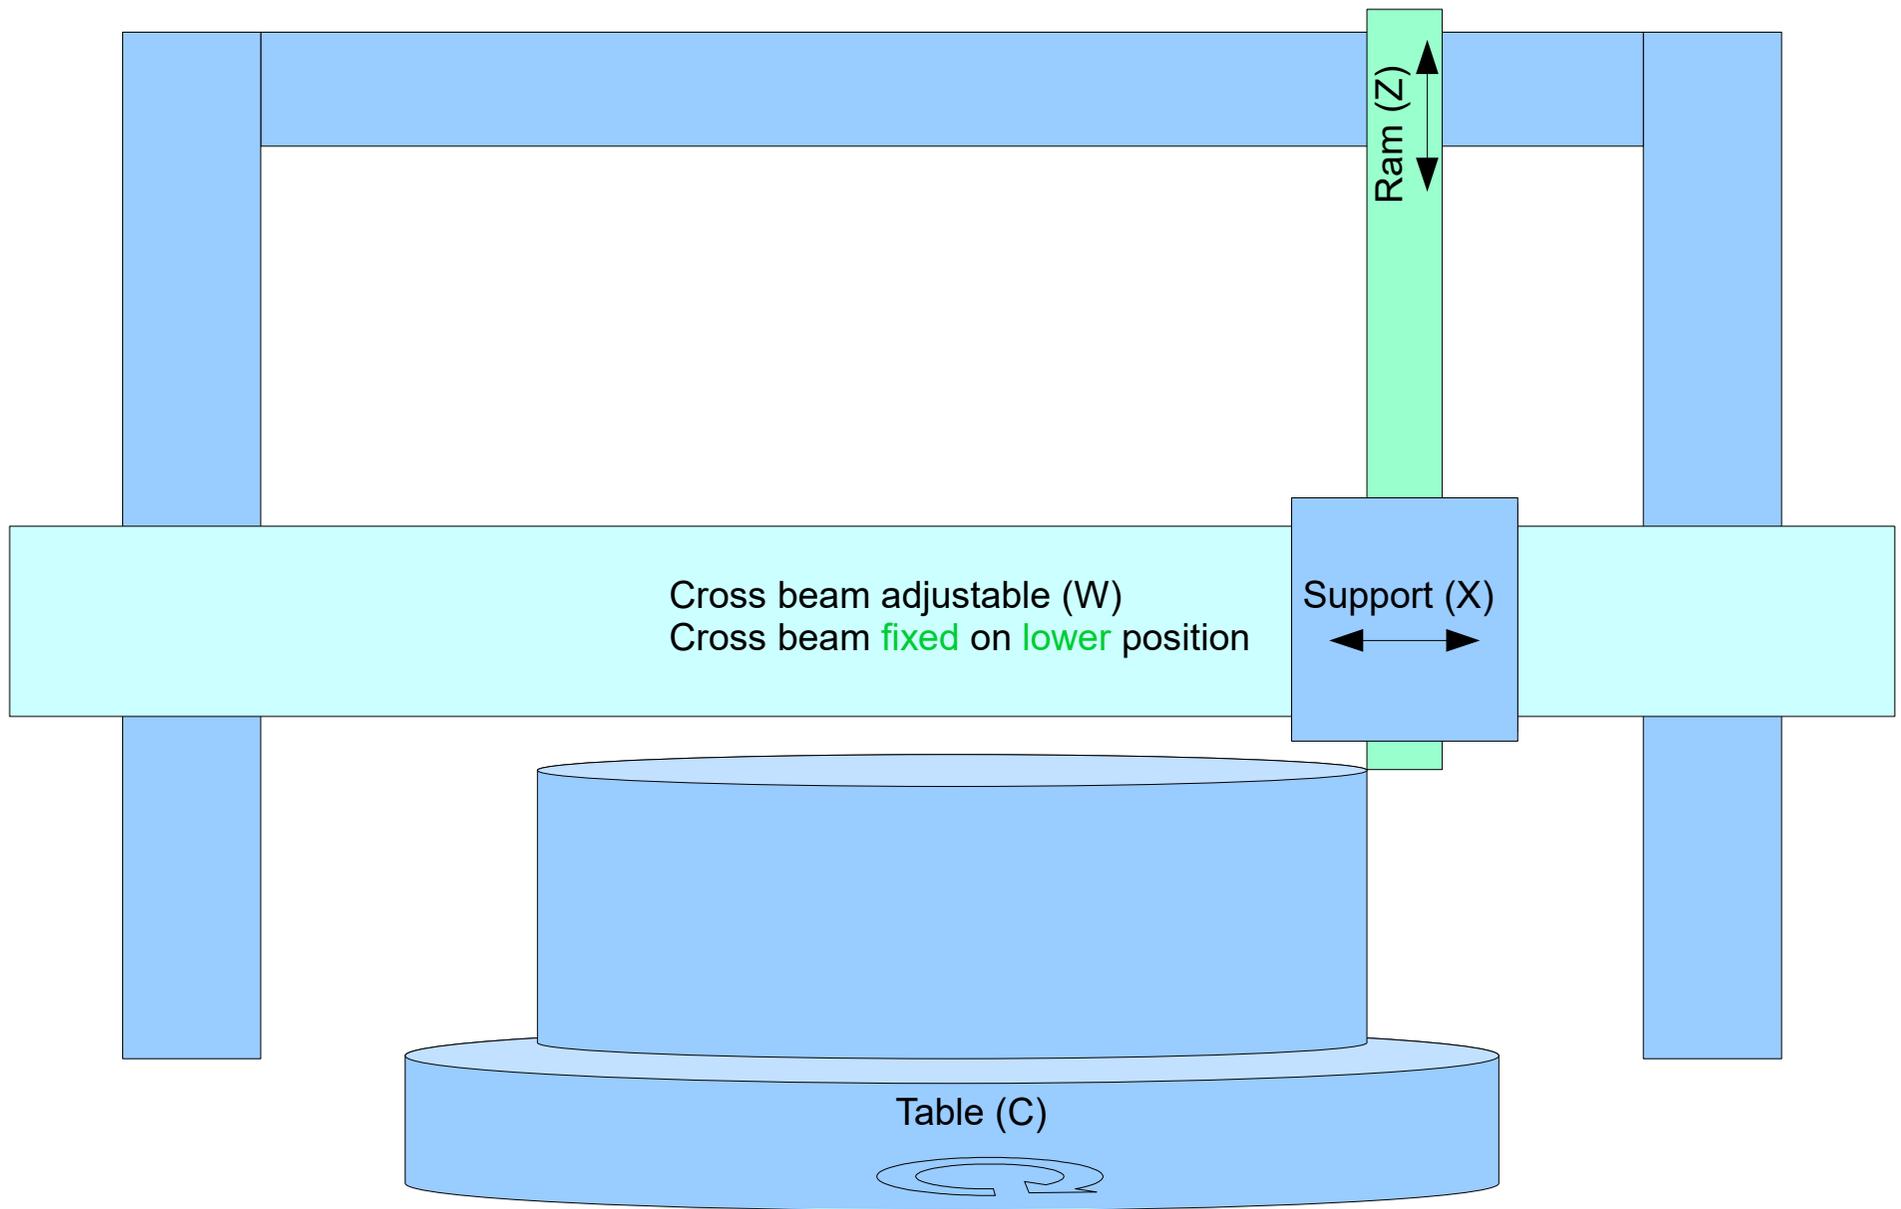


Machining
Moving table
Front-view
(Y)

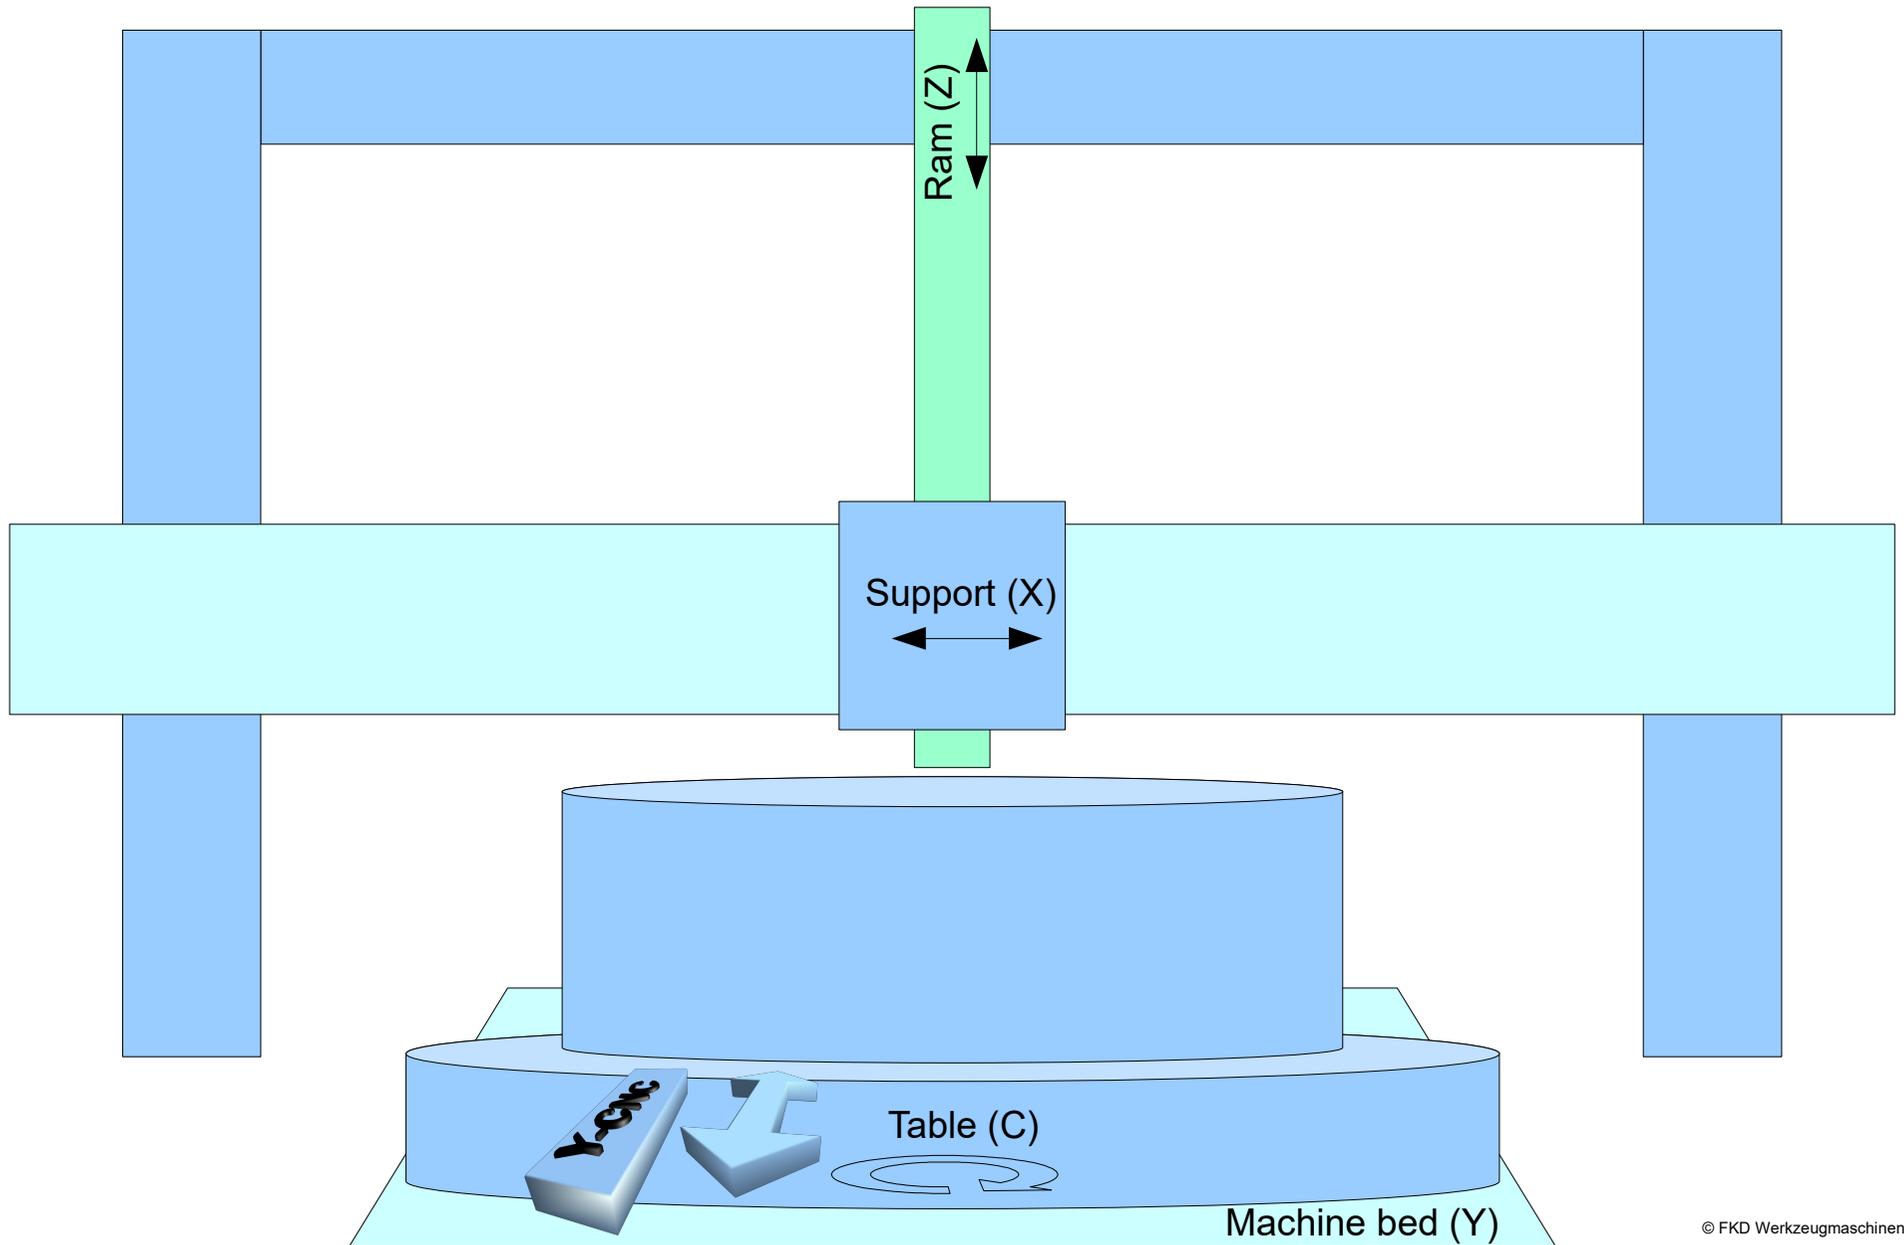


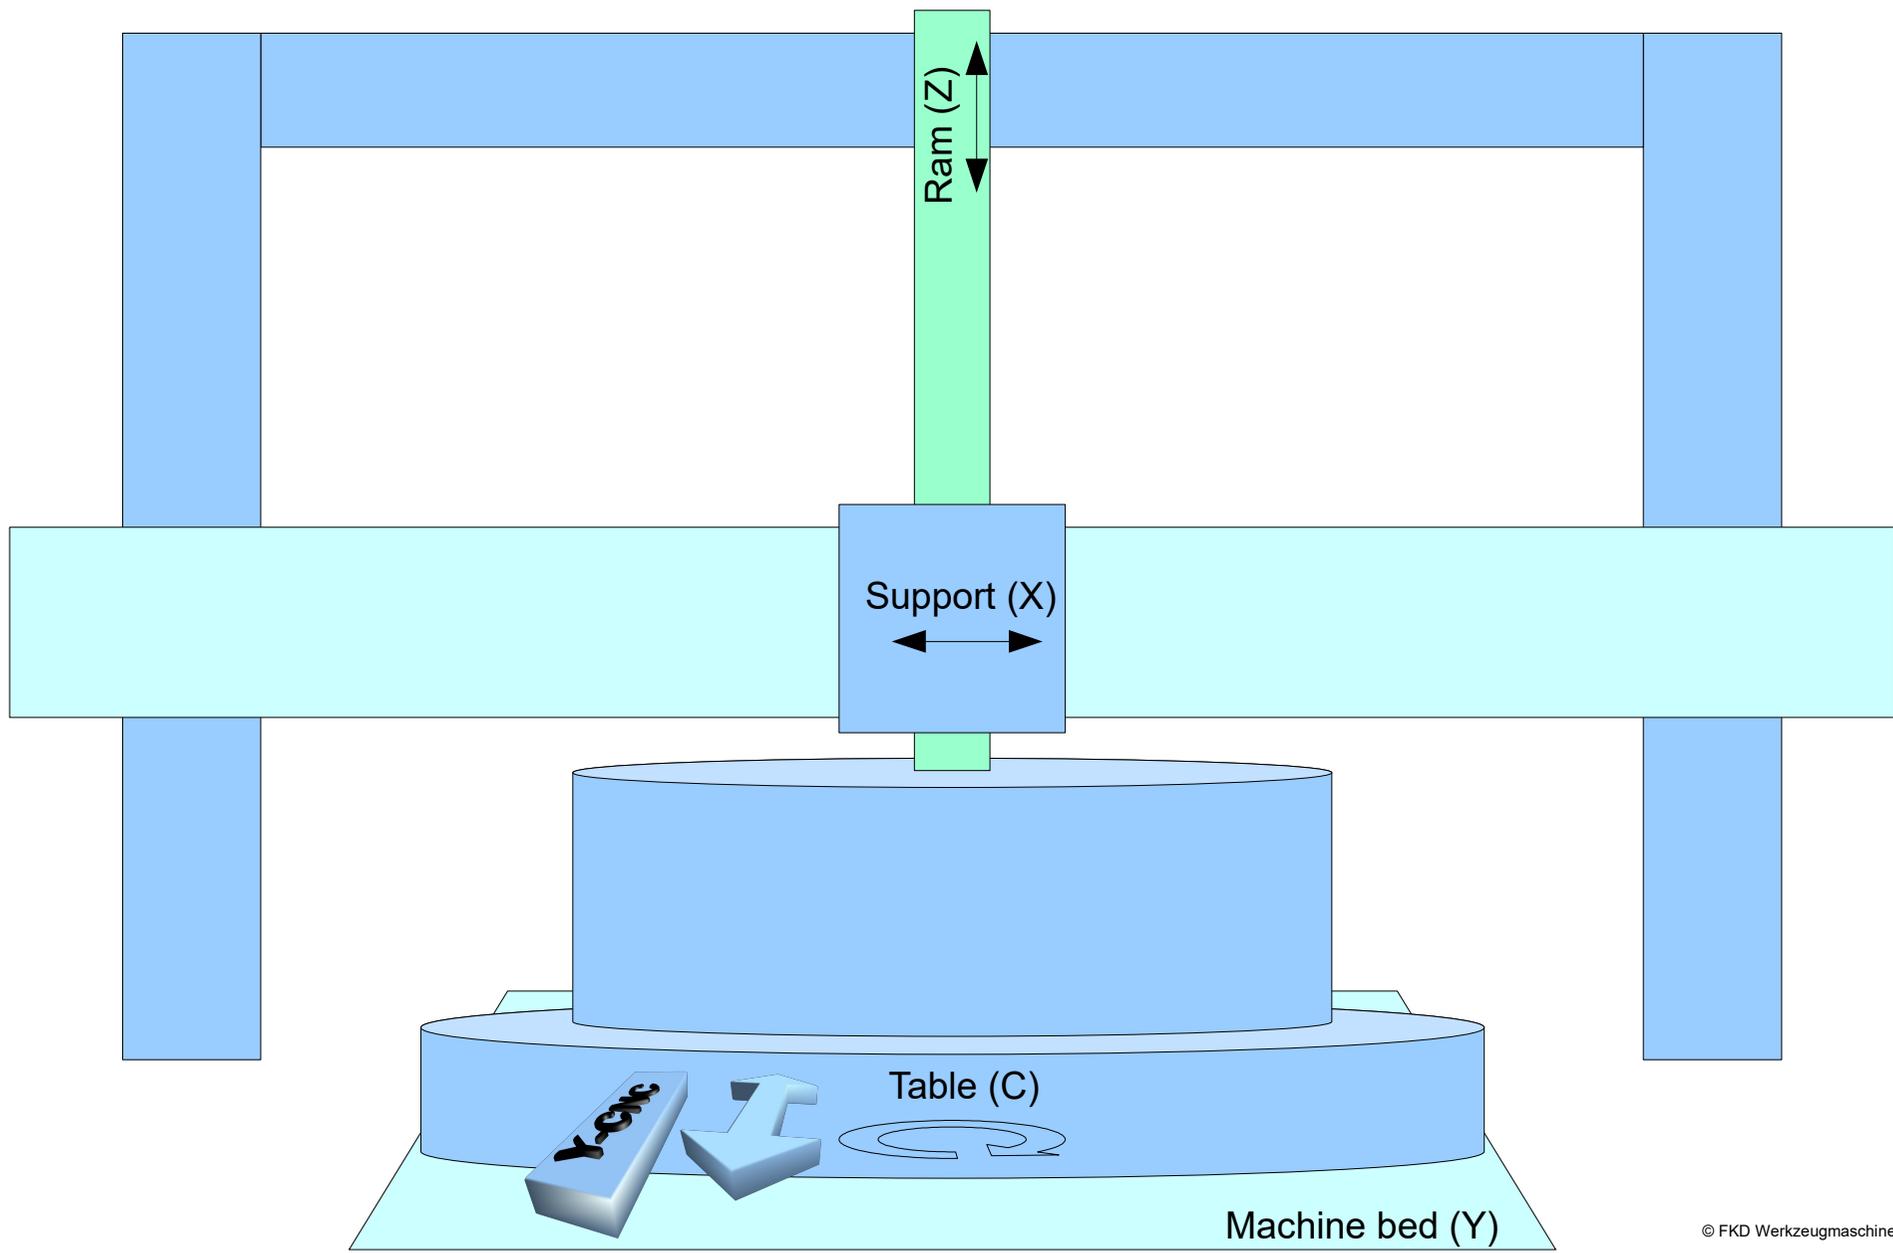

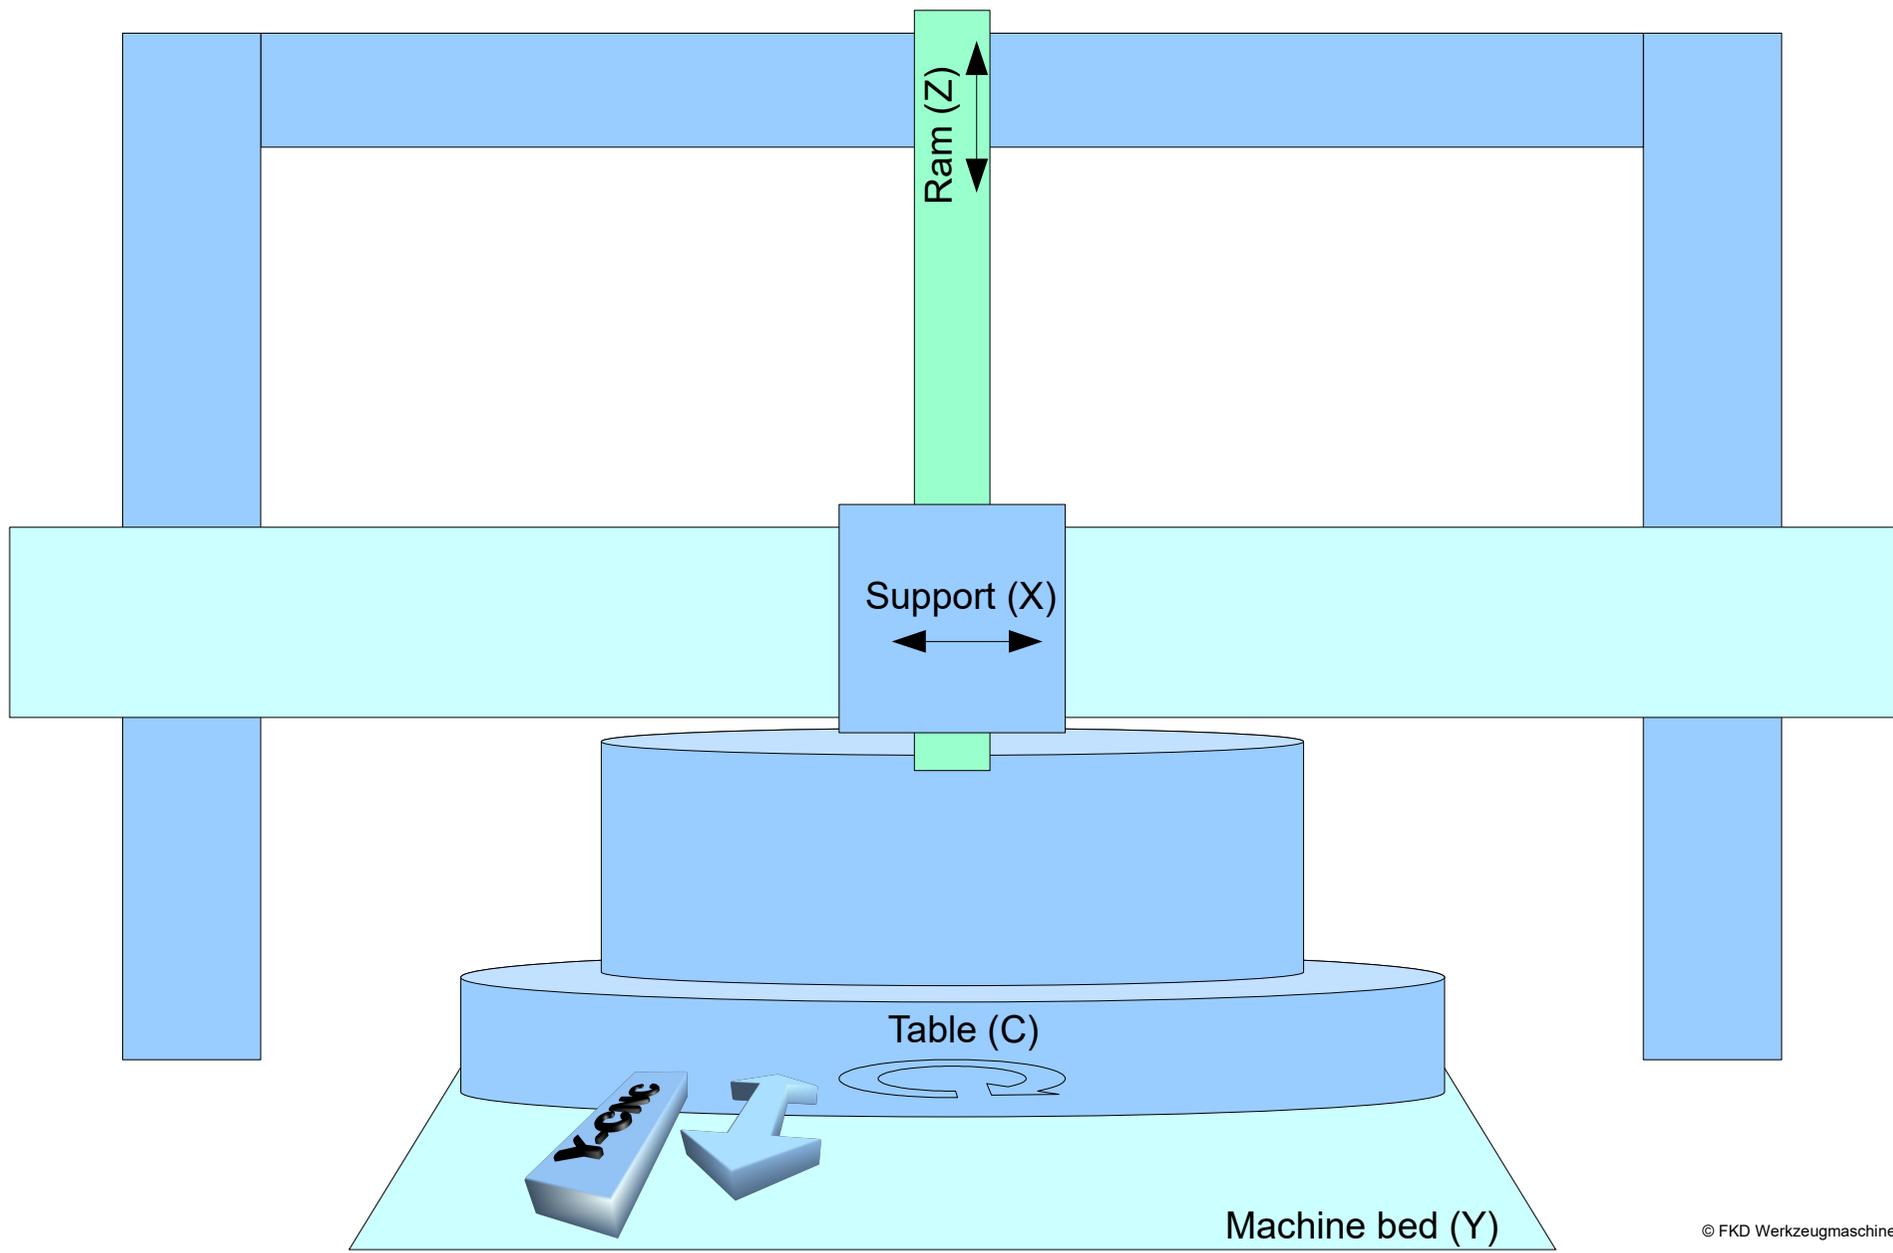


Machining
Moving table
Side-view
(Y)

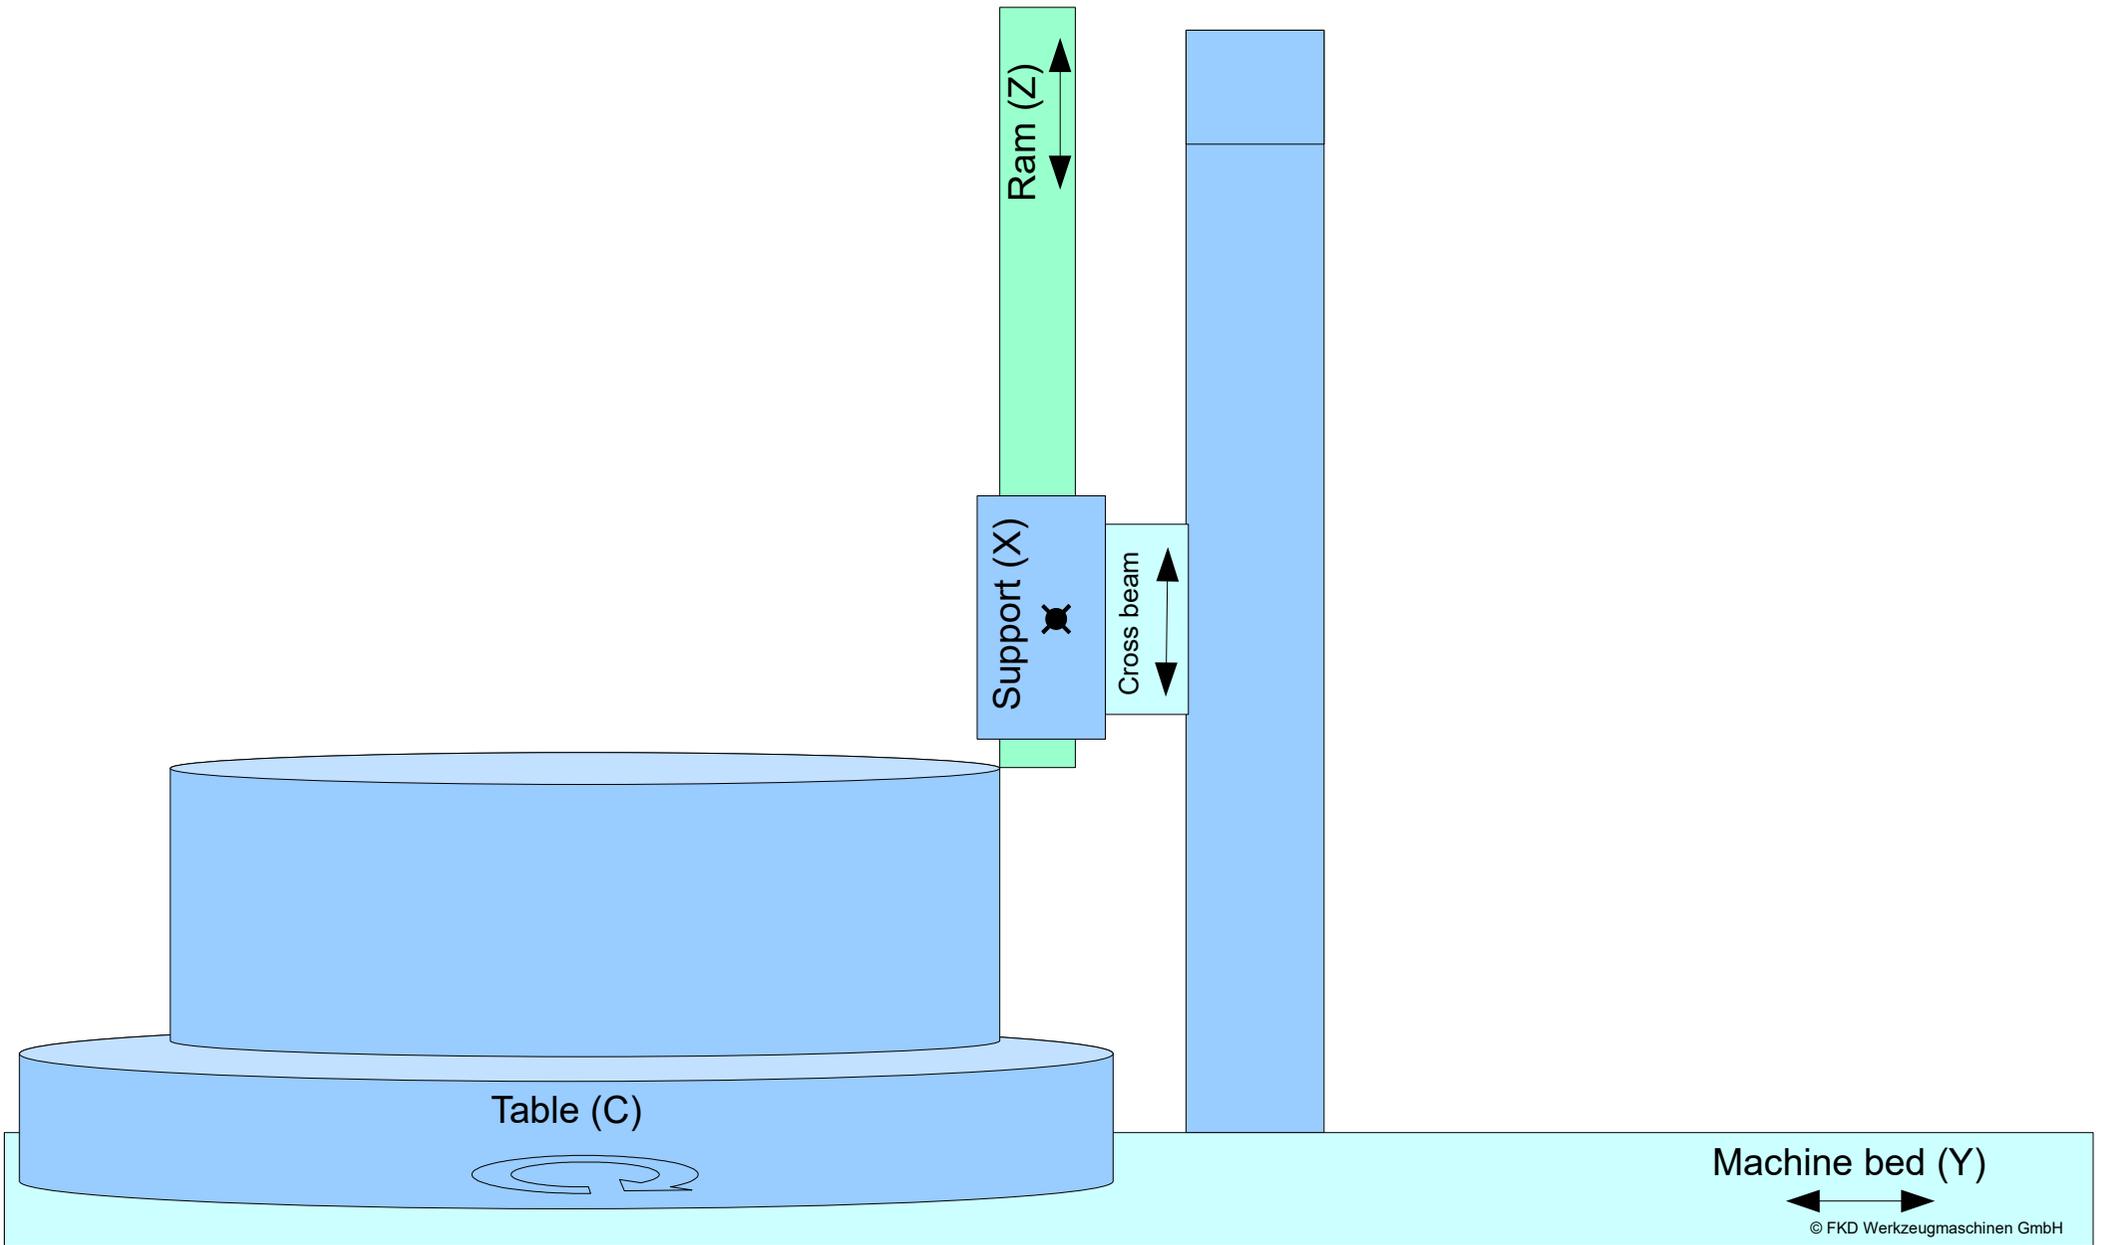

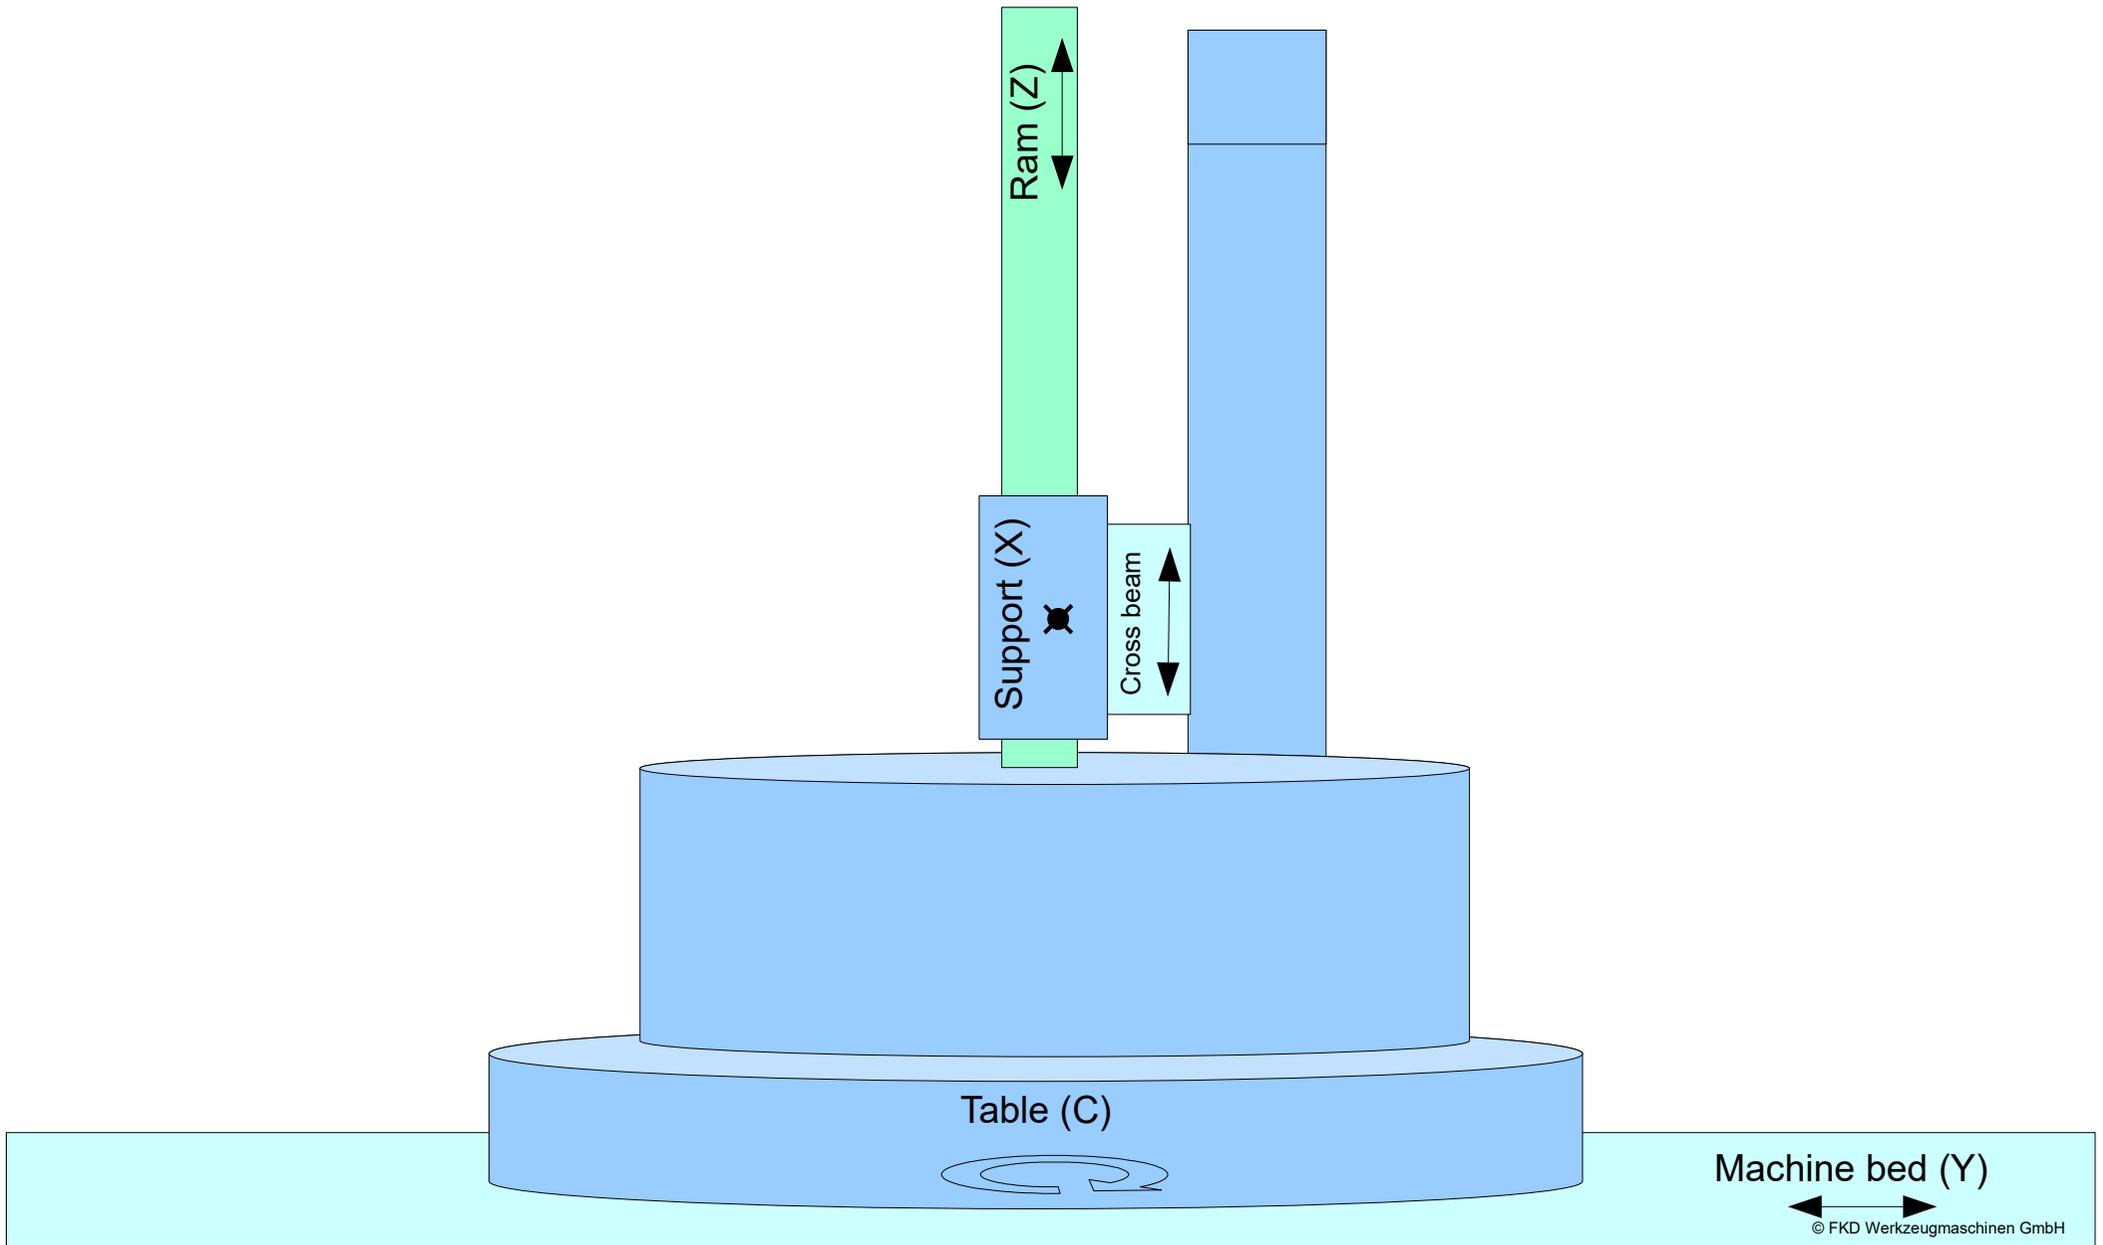

Machine bed (Y)

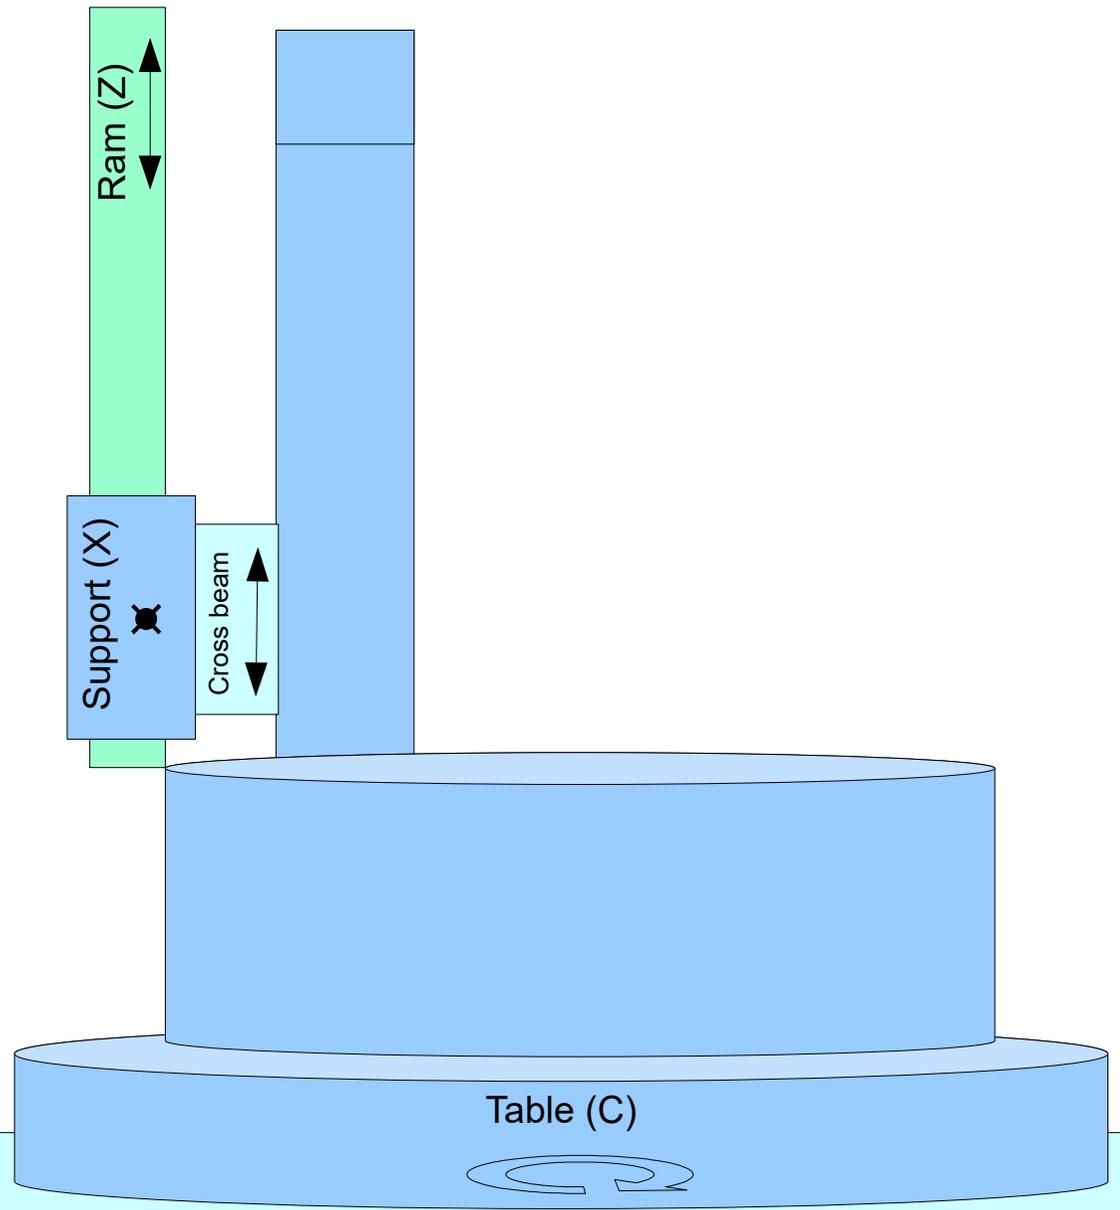

Support (X)

Ram (Z)

Cross beam

Table (C)